



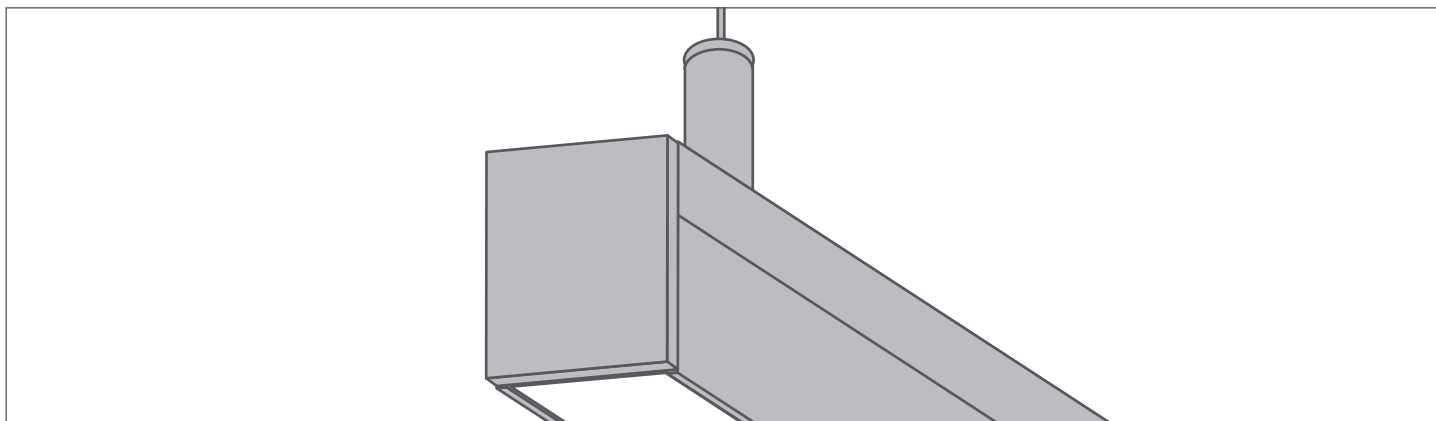


Instruction includes the following mounting methods:

**1) Rod - non-conductive
(drop lead)**

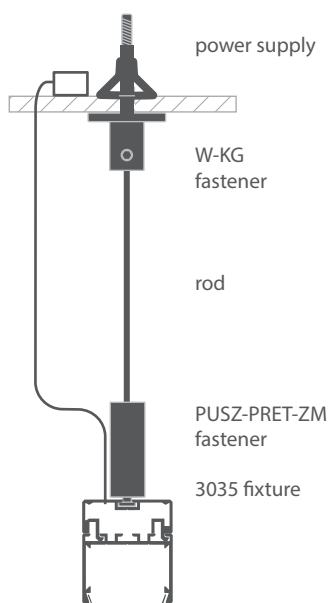


If fully built fixtures are ordered and received from KLUS please skip to p. 2, step 5.

**2) Rod - conductive driven
power supply**

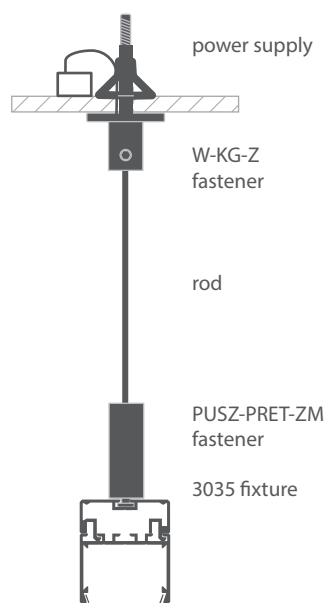


If fully built fixtures are ordered and received from KLUS please skip to p.3, step 5.

**3) Wire - non-conductive
(drop lead)**

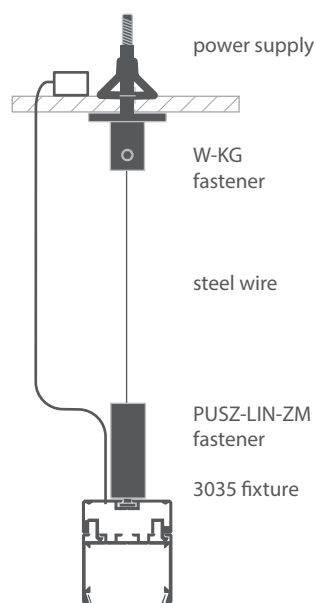

If fully built fixtures are ordered and received from KLUS please skip to p. 4, step 5.

**4) Wire - conductive driven
power supply**

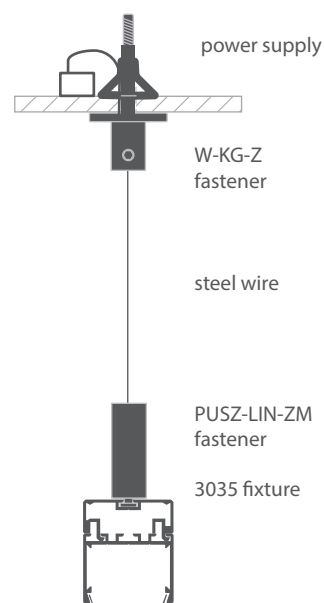

If fully built fixtures are ordered and received from KLUS please skip to p. 5, step 5.

Tools needed for mounting:


- drill
- pliers
- allen wrench
- soldering iron

NOTE! All LED strips must be connected to a 12 V or 24 V power supply.

IMPORTANT: The manual presents the simplest mounting procedure.
More mounting procedures and related accessories can be found at klusdesign.com

1. Drill 2 holes in the mounting track to install the fasteners and 1 hole in the extrusion to lead the powering cables.

cross-section

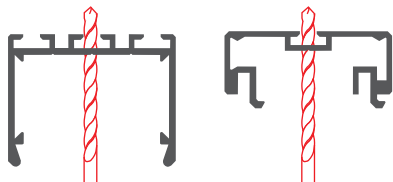


top view




2. Mount the LED strip in the extrusion and lead the cable through a pre-drilled hole.

cross-section

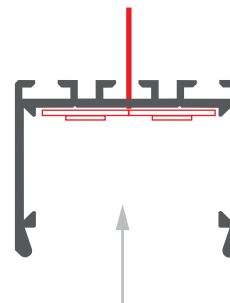


bottom view

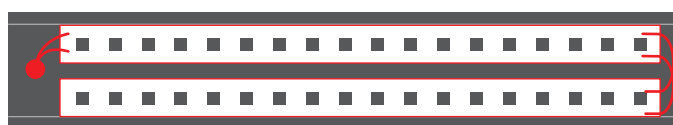


3. Install the PUSZ-PRET-ZM fasteners with rods on the mounting track and join the extrusion and mounting track with the use of BLOK springs. One pole of power should be connected to a single fastener. Fastener installation manuals can be downloaded [here](#).


side view

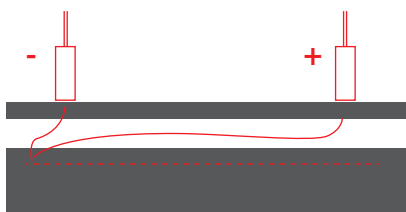


cross-section

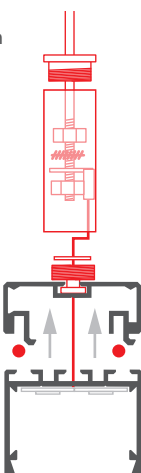


4. Install the cover and both end caps.

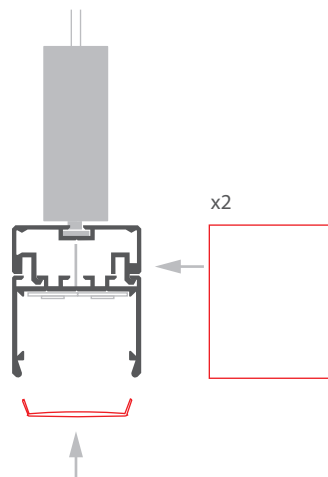

5. Install the W-KG-Z ceiling fasteners. The installation manual can be downloaded [here](#). Connect the cables, each for the single power pole to the fasteners. The cables should go through a pre-drilled hole just under the masking cover of the fastener.

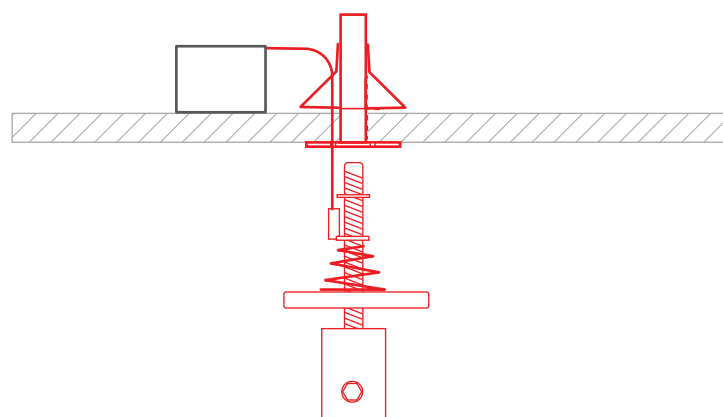


6. Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

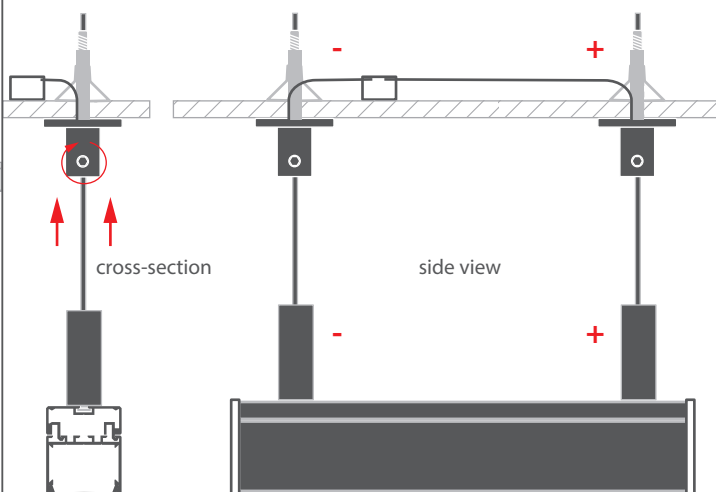

1. Drill the holes in both extrusion and the mounting track to lead the powering cables.

cross-section

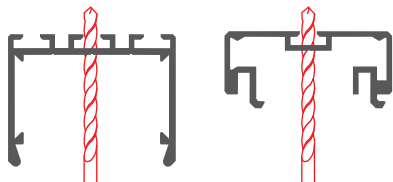


top view




2. Mount the LED strip in the extrusion and lead the cable through a pre-drilled hole.

cross-section

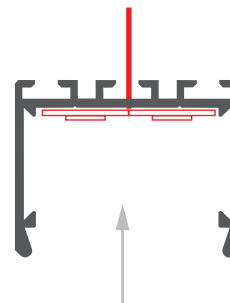


bottom view

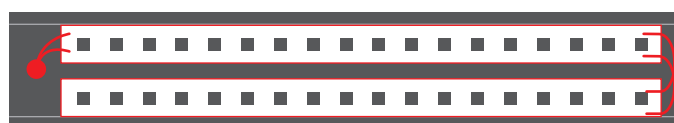

3. Install the PUSZ-PRET-ZM fasteners with rods on the mounting track. The fastener installation manual can be downloaded [here](#).

cross-section

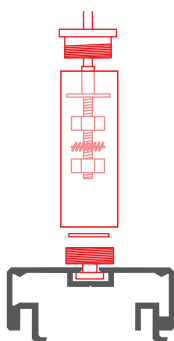


top view



4. Join the extrusion with the mounting track with the use of BLOK springs. Install the cover and both end caps.


cross-section

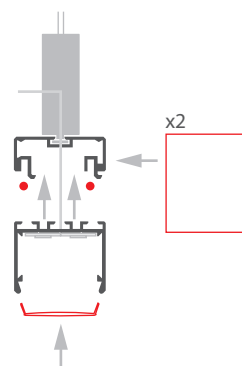


top view



5. Install the W-KG ceiling fasteners. The fastener installation manual can be downloaded [here](#). Place the power supplier next to the fastener and drill the ceiling to lead the cable to it.

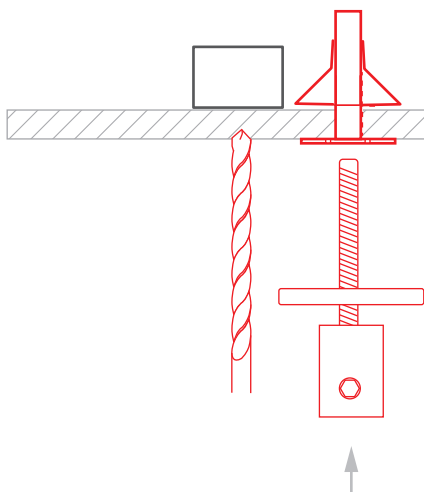


6. Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

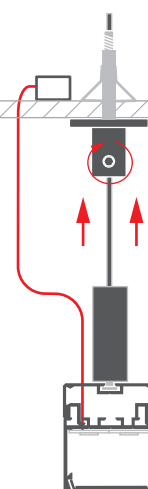

1. Drill the holes in both extrusions and the mounting track to lead the powering cables.

cross-section

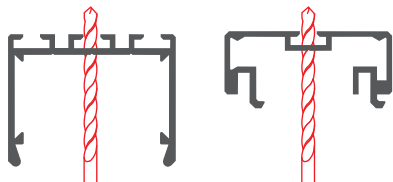


top view




2. Mount the LED strip in the extrusion and lead the cable through a pre-drilled hole.

cross-section

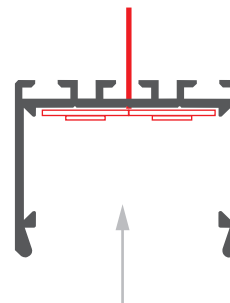


bottom view

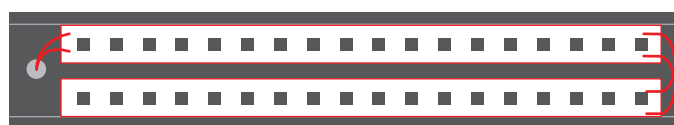

3. Install the PUSZ-LIN-ZM fasteners with rods on the mounting track. The fastener installation manual can be downloaded [here](#).

cross-section

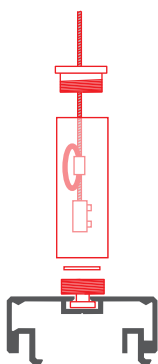


top view



4. Join the extrusion with the mounting track with the use of BLOK springs. Install the cover and both end caps.


cross-section

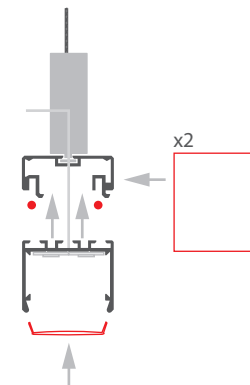


top view



5. Install the W-KG ceiling fasteners. The fastener installation manual can be downloaded [here](#). Place the power supplier next to the fastener and drill the ceiling to lead the cable to it.

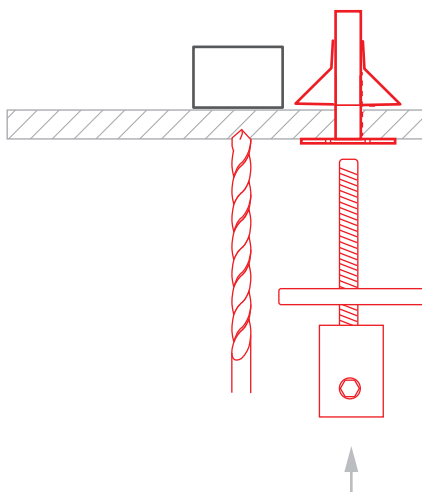


6. Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

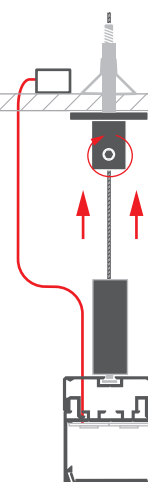

- 1.** Drill the holes in both extrusions and the mounting track to lead the powering cables.

cross-section

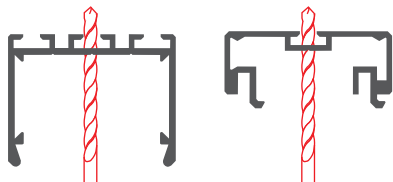


top view




- 2.** Mount the LED strip in the extrusion and lead the cable through a pre-drilled hole.

cross-section

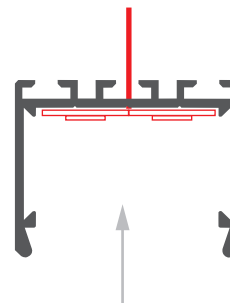

bottom view


Positive pole has to be soldered

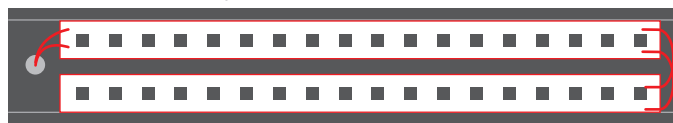


Negative pole has to be soldered

- 3.** Install the PUSZ-LIN-ZM fasteners with rods on the mounting track and join the extrusion and mounting track with the use of BLOK springs. One pole of power should be connected to a single fastener. Fastener installation manuals can be downloaded at [here](#).


side view

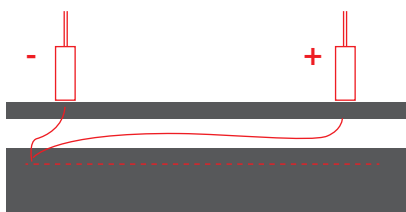


cross-section

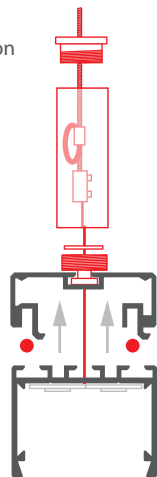

- 4.** Install the cover and both end caps.

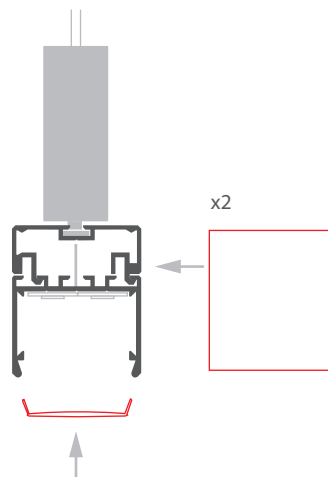

- 5.** Install the W-KG-Z ceiling fasteners. The fastener installation manual can be downloaded [here](#). Connect the cables, each for the single power pole to the fasteners. The cables should go through a pre-drilled hole just under the masking cover of the fastener.

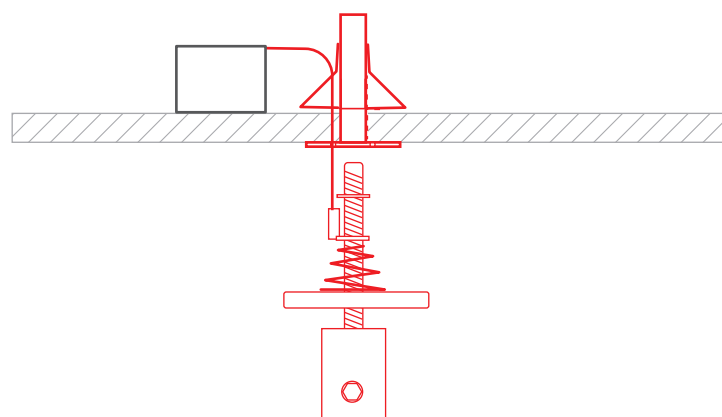

- 6.** Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

