


Tools needed for mounting:


- allen wrench
- drill
- screwdriver

NOTE! A list of products corresponding with the selected accessories is available at klusdesign.com


1. Drill a 5mm hole in the selected extrusion.

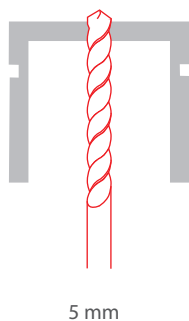


2. Bevel the hole so that the plastic screw head fits in.

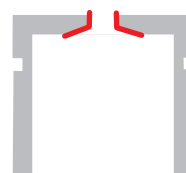

3. Put the screw through the hole and attach it to the head.

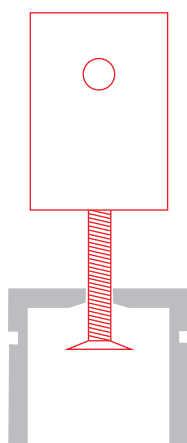

4. Mount the arm in the head. Block the arm by tightening the pressure screw in the head with the Allen wrench.

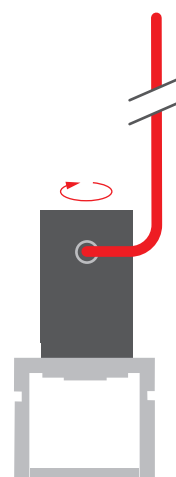

5. NOTE! The position of the lighting fixture on the arm can be adjusted in the range of 360° (depending on the distance of the fastener from the edge of the extrusion).

