



Parts needed to mount the DP-PDS-O fastener

Bottom head (C)

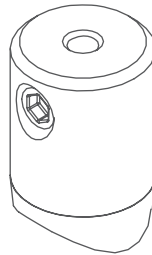

Arched base (B)

Plastic screw (A)




Tools needed for mounting:

- Allen wrench
- drill


NOTE! A list of products corresponding with the selected accessories is available at klusdesign.com.

1. Drill a hole with a diameter of 5 mm in the selected extrusion.

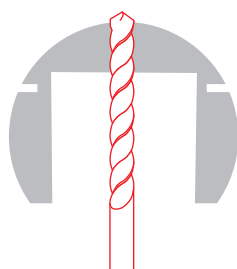


Fi 5 mm


2. Bevel the hole so that the plastic screw head fits in.

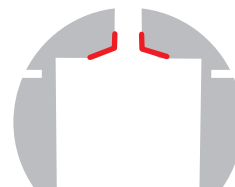


3. Mount the plastic screw (A), on the top mount the assembled arched base (B) and conductive head (C).

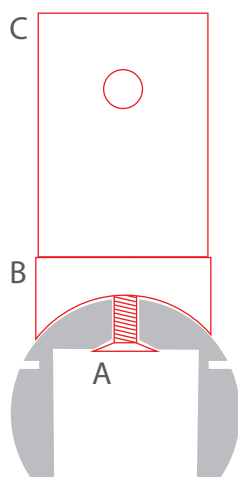

4. Mount the LED strip.

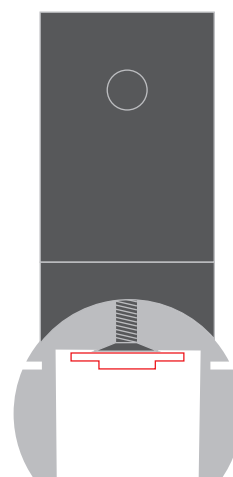

5. Insert the rod into the mounting bracket of the head. Block the rod by tightening the pressure screw in the head with the Allen wrench.

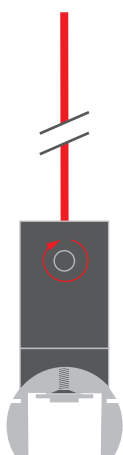

6. Suspend the lighting fixture using a selected system.

