




Parts needed to mount the KOZMA extrusion

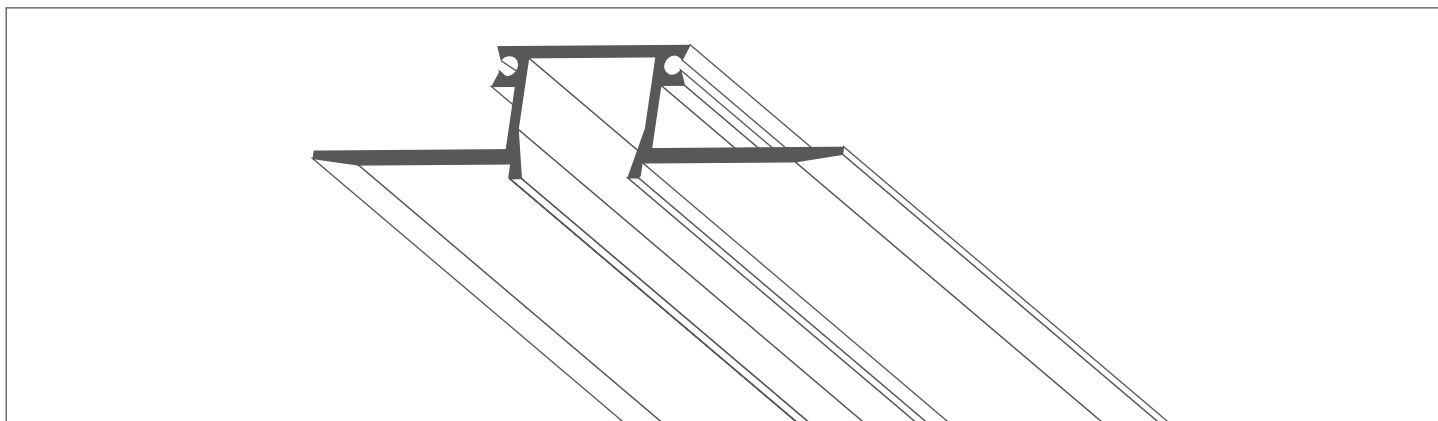

Extrusion (A)



LED strip (B)



Protective
insert (C)



Cover (D)



End cap (E)

Tools needed for mounting:


- mounting glue

The **TECH-KA PROTECTIVE INSERT** ensures that the extrusion slot remains wide enough for the snap--in cover (its use is **NECESSARY** during mounting and finishing works).


WARNING! All LED strips should be connected to a 12 V or 24 V power supply.

IMPORTANT: The mounting instructions present the basic form of assembly.
More methods and related accessories can be found at www.KlusDesign.com


1. Mount the LED strip (B) in the extrusion, lead out the power cable, insert the protective insert (C) and then insert the end caps (E).

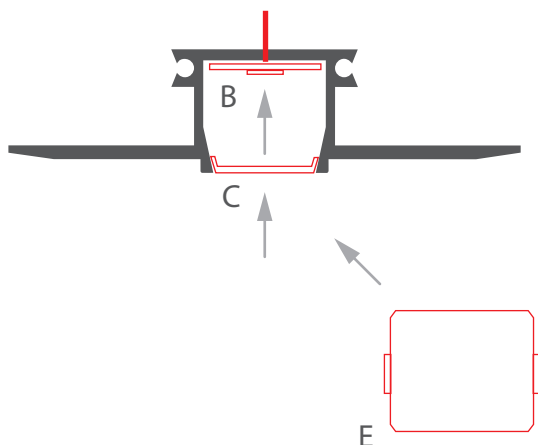


2. Attach the fixture (A) to the ceiling surface and connect the power cable.

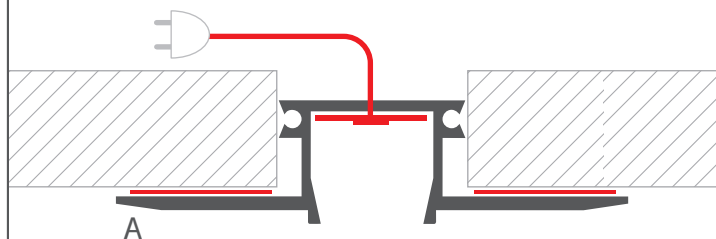

3. Apply a layer of plaster to the extrusion and the ceiling and then paint the surface.

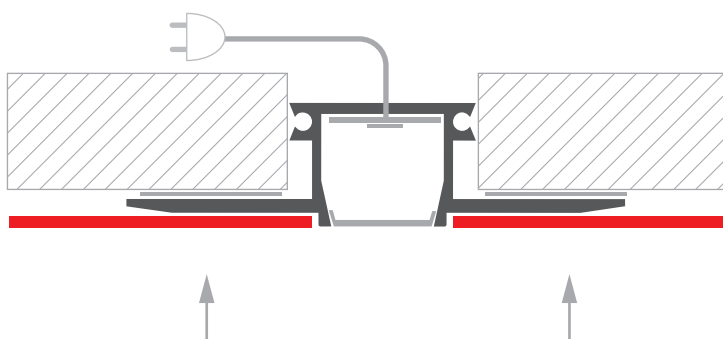

4. Slide a sharp tool between the extrusion and the insert (on both sides of the insert) to cut off the layer of plaster and paint from the insert.

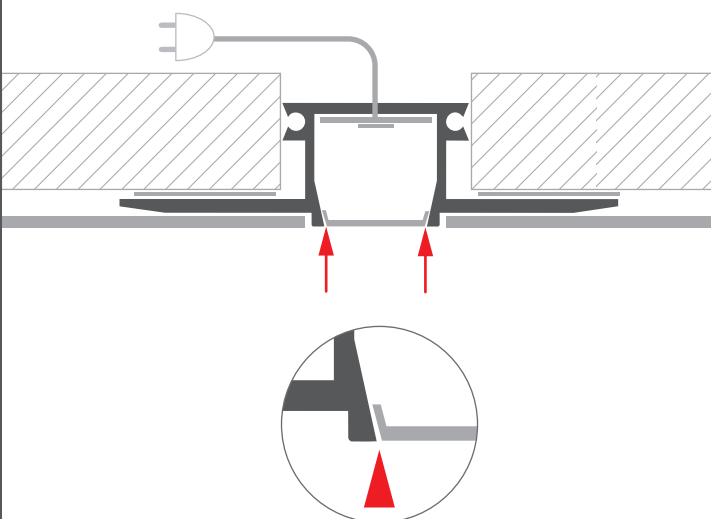

5. Remove the protective insert (C) and then insert the proper cover (D).

