


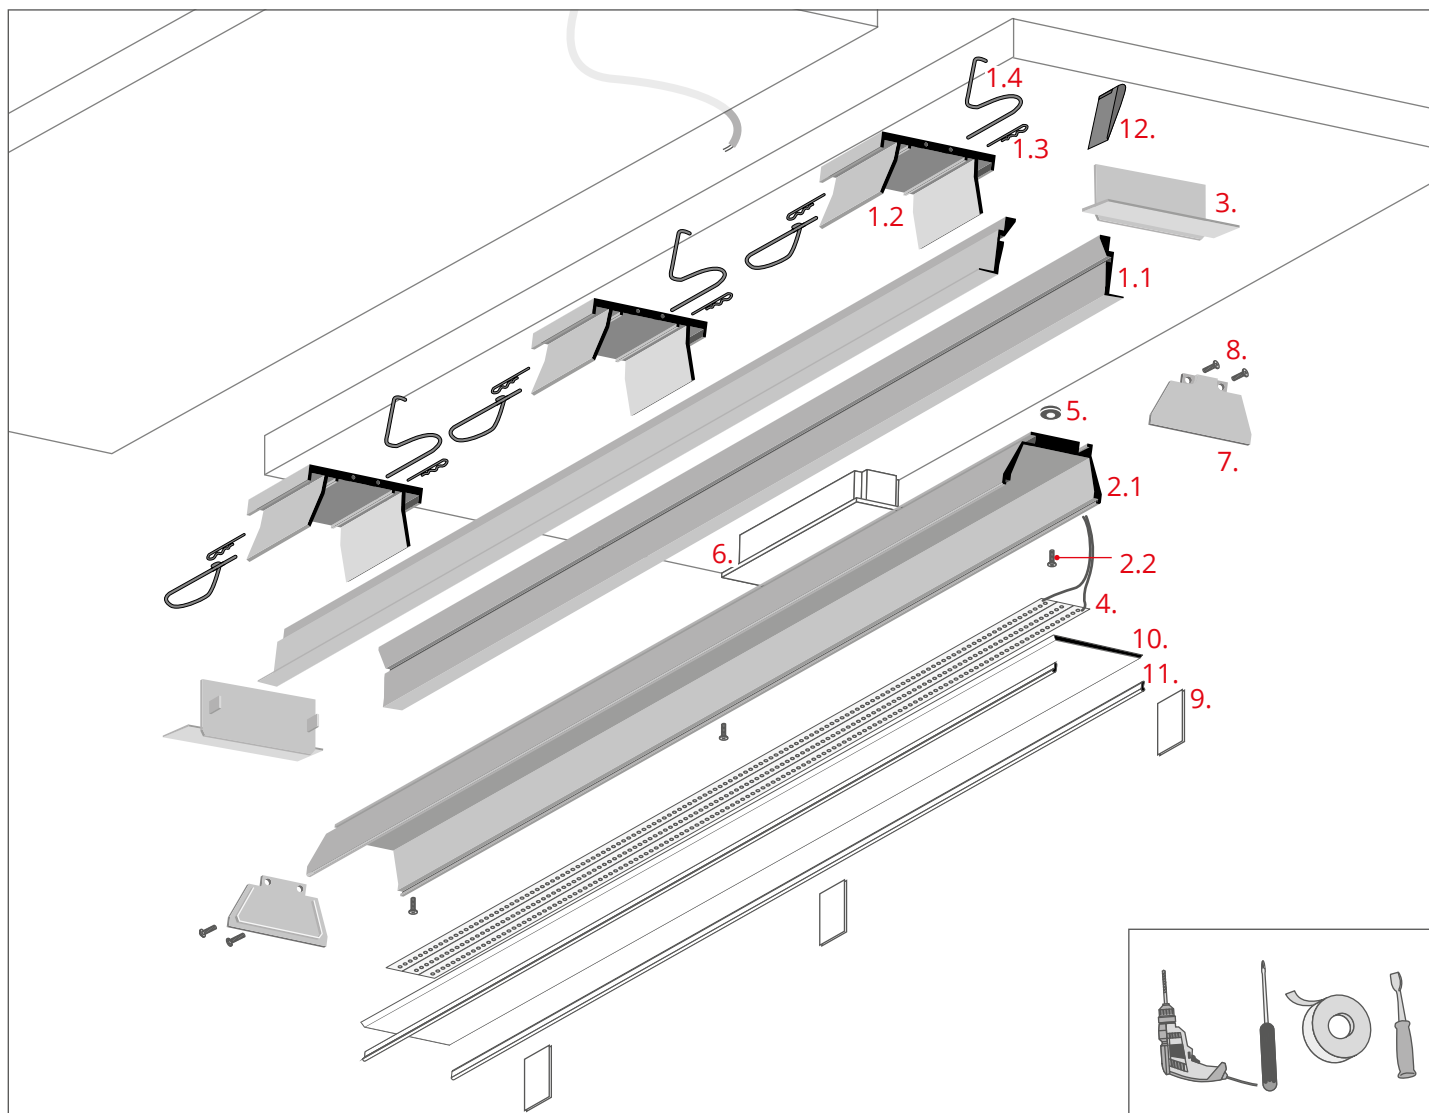

1.1 RAM-KOL-50 profile (item 1.1)

1.2 RAM-KOL-50 profile (item 1.2)

1.3 Spring (item 1.3)

1.4 Spring (item 1.4)

2.1 OMODO-50 profile (item 2.1)

2.2 Locking bolt

3. End cap for item 1.1*

4. LED tape*

5. Gland*

6. Power supply (12 V / 24 V)*

7. End cap for item 2.1*

18060

18053

8. Bolt*

9. Wedge*

10. Cover*

11. Silicone cord*


12. Mounting tool for springs 1.3*

*The full range of accessories and electronics is available at www.KlusDesign.com

NOTE! All LED tapes must be connected to a 12 V or 24 V power supply.

IMPORTANT: Not all possible mounting procedures are presented here. More mounting procedures and related accessories can be found at www.KlusDesign.com. Drawings of extrusions and accessories in these instructions are simplified and only approximate the actual shapes.

Ia

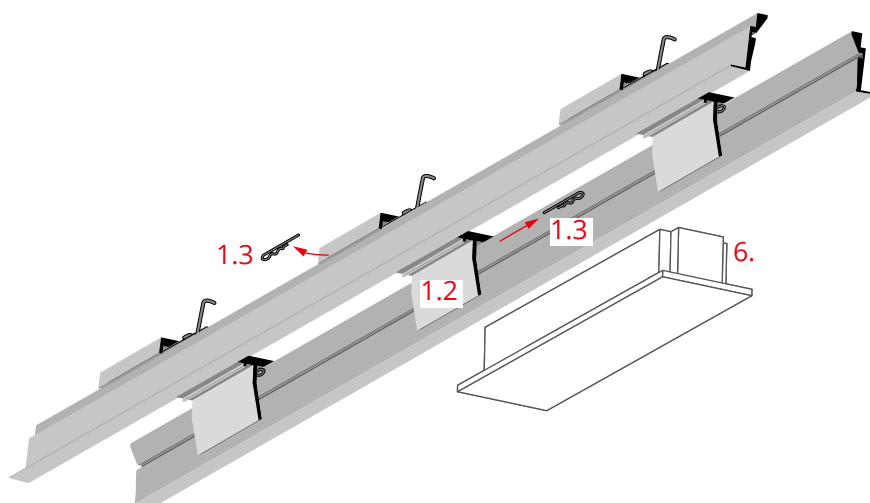


If the power supply (6) does not fit into the openings of the RAM-KOL-50 profile, its items (1.2) must be slid further apart accordingly.

To do this, remove the springs (1.3).

This operation can also be done after mounting the profile in the drywall.

Ila

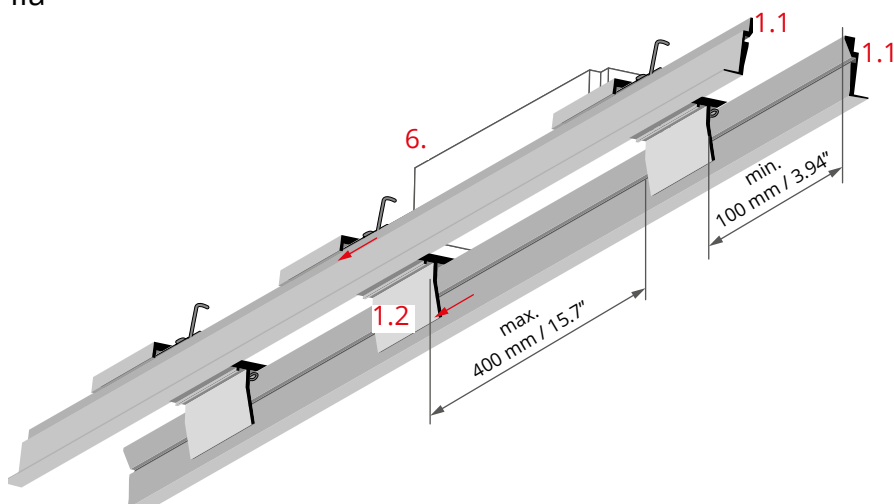


Slide the items (1.2) along the item (1.1).

The minimum distance of the last item (1.2) from the end of the profile is 100 mm / 3.94". The distance between items (1.2) cannot exceed 400 mm / 15.7".

After sliding items (1.2), make sure that the power supply (6) now fits into the enlarged opening.


IIla

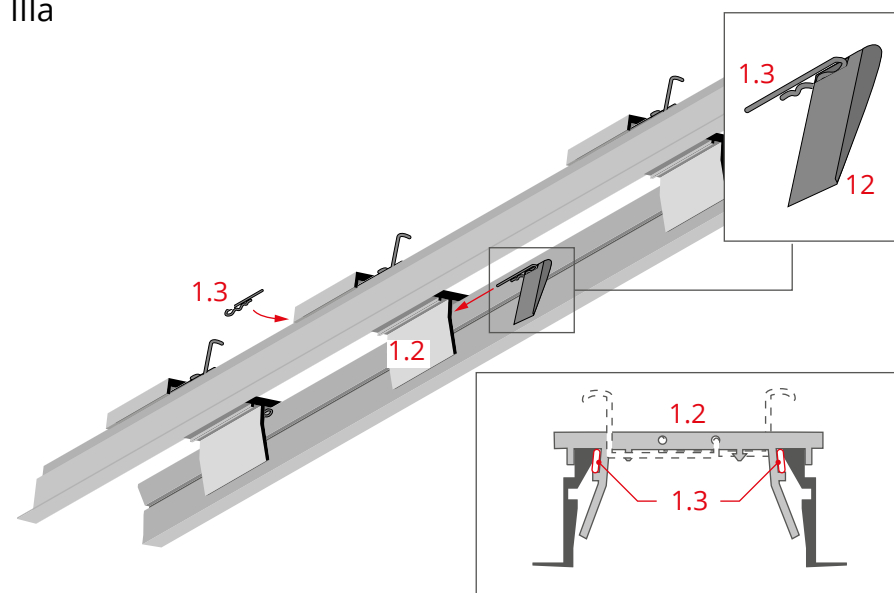

Put the springs (1.3) back in the items (1.2).

To assist, use the mounting tool for springs 1.3 (12).

b) Groove preparation using the RAM-KOL-50 profile

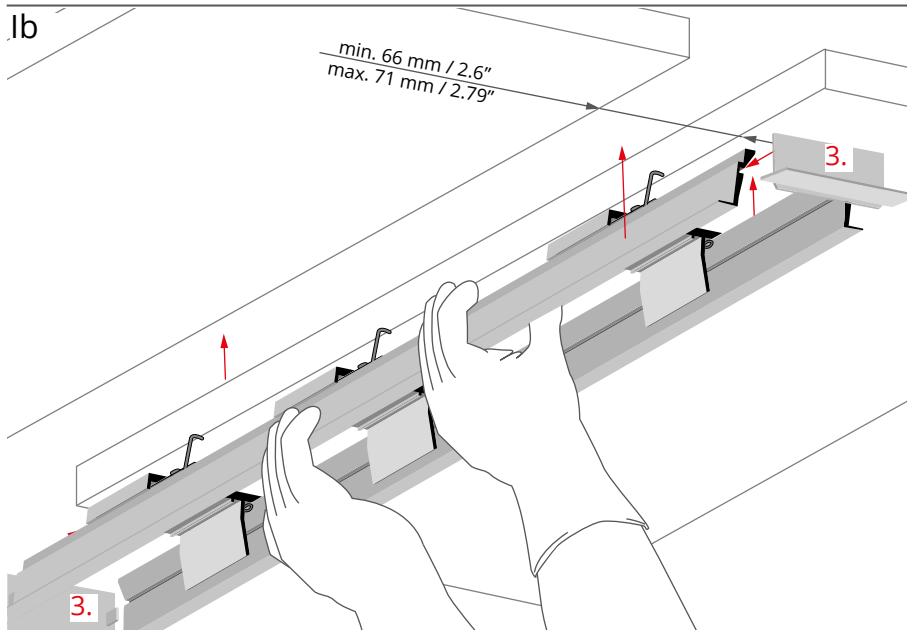


Attach end caps to the item 1.1 (3).

The groove in the ceiling should be between 66 mm / 2.6\"



Place the profile in the groove and hold it until the springs (1.4) are locked following the steps below.

NOTE! The profile must not get deformed during mounting!

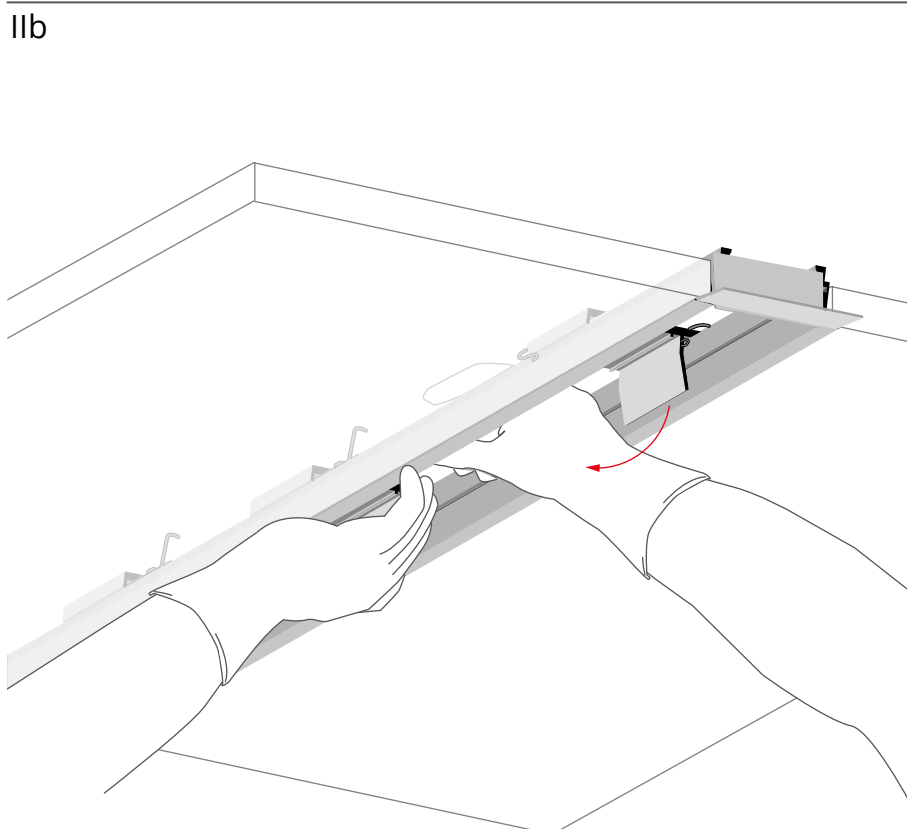


Lock the springs (1.4) at each item (1.2) by turning them, pressing them against the plate surface and sliding under the edge of the item (1.2) as shown in the figure.

Skip to pg. 5 if assembled light fixture is received from factory

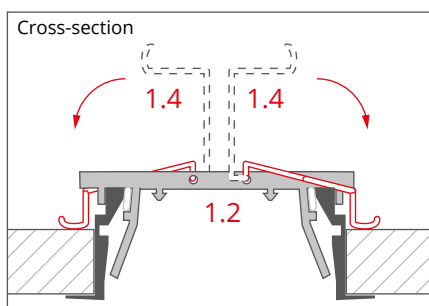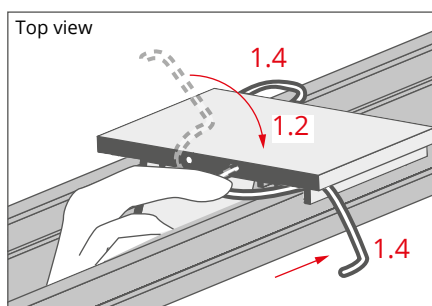

Ic

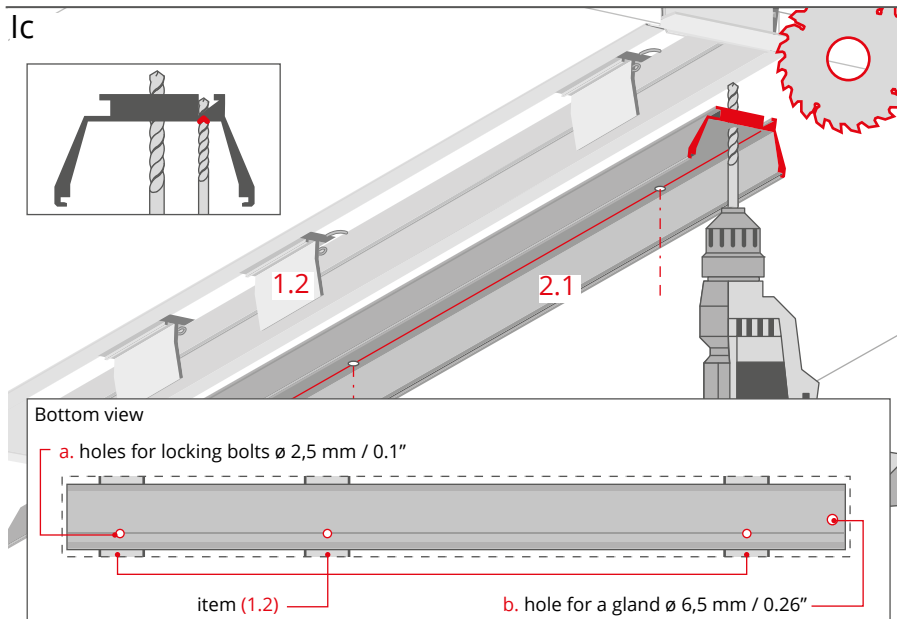


a. Drill holes for locking bolts in the profiled orientation line in the profile (2.1).

The number of holes must be equal to the number of bolts used. Each hole should be in the middle of the corresponding item (1.2). There must be a minimum of two bolts per 1 meter of a profile.

b. Drill a hole in the profile (2.1) for the cable gland.

NOTE! The profile (2.1) must be shortened by 6 mm / 0.24" at each end where the end caps will be mounted.

IIc

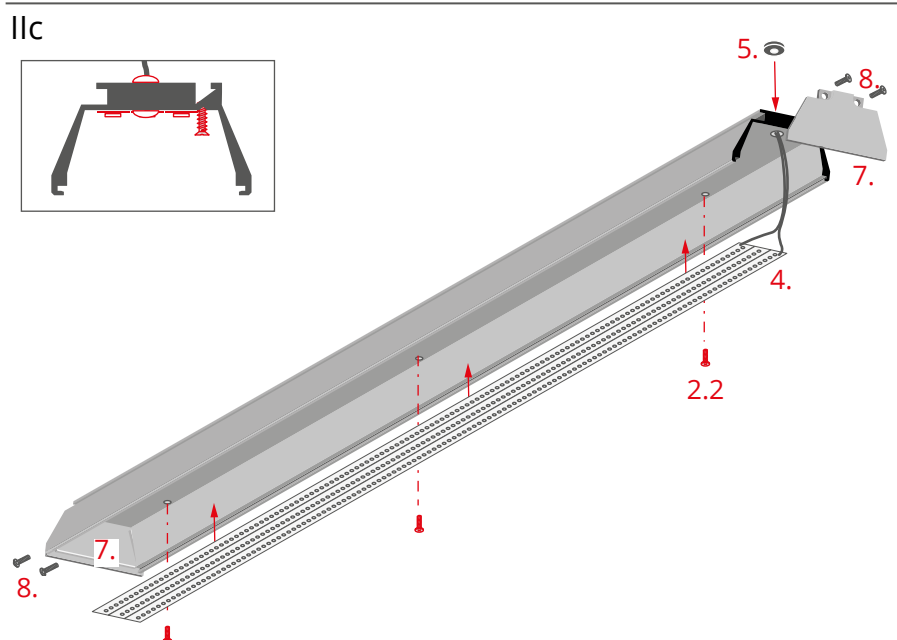


Adhere the LED tapes (4), mount the gland (5) and route the power cable through it.

Attach end caps to the item 2.1 (7) with the bolts (8).


Locking bolts (2.2) can be tightened preliminarily in the pre-drilled holes before mounting the profile at its destination (after mounting the LED tapes).

IIIc

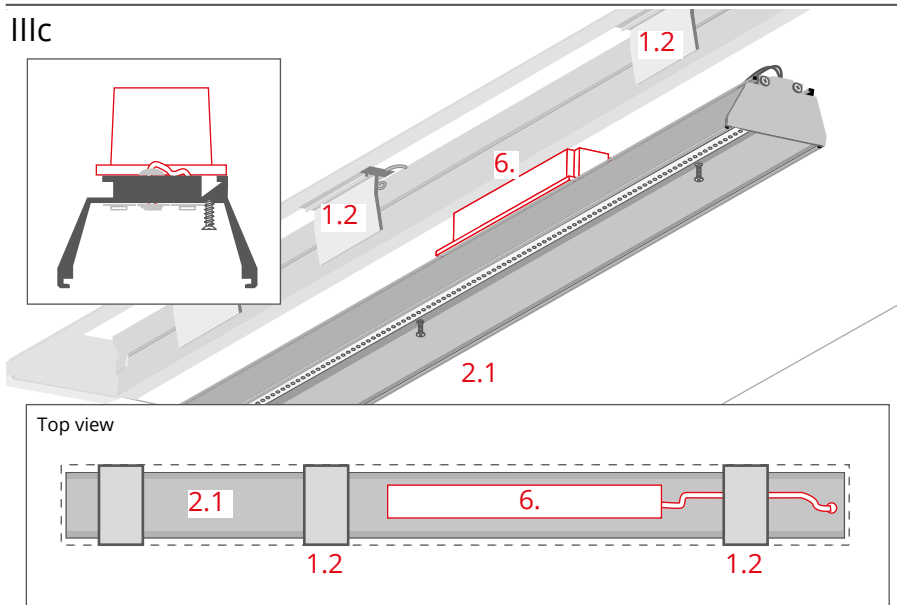


Mount the power supply (6) on the back of the profile in such a position that it fits into the opening of the RAM-KOL-50 profile.

Run the power cable to the power supply through one of the channels in the profile (2.1), so that it does not protrude above the surface.

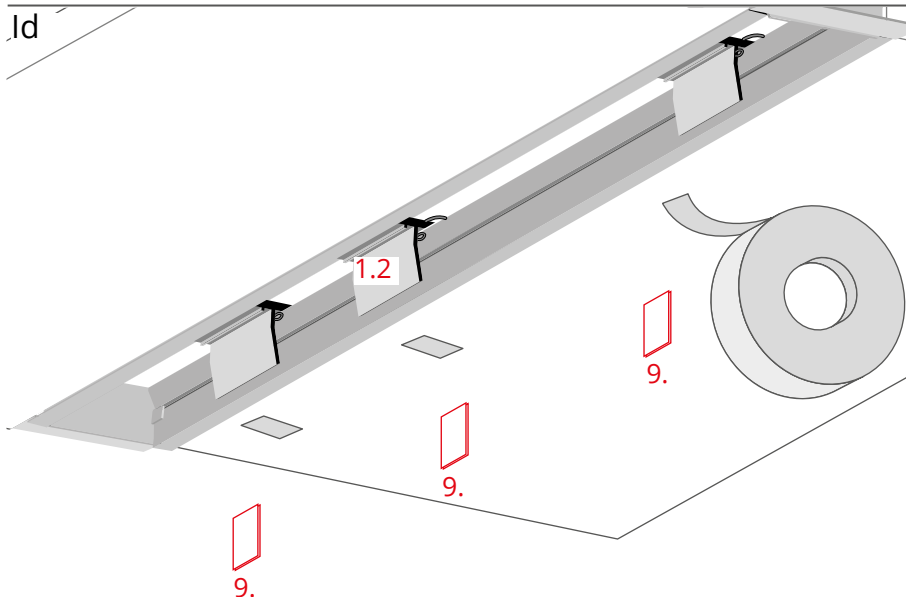

To facilitate further work, mark the location of the items (1.2) in the RAM-KOL-50 profile, e.g. with colored adhesive tape.


Prepare as many wedges (9) as there are items (1.2). They will prevent the OMODO-50 profile from falling out in the initial phase of the mounting procedure.

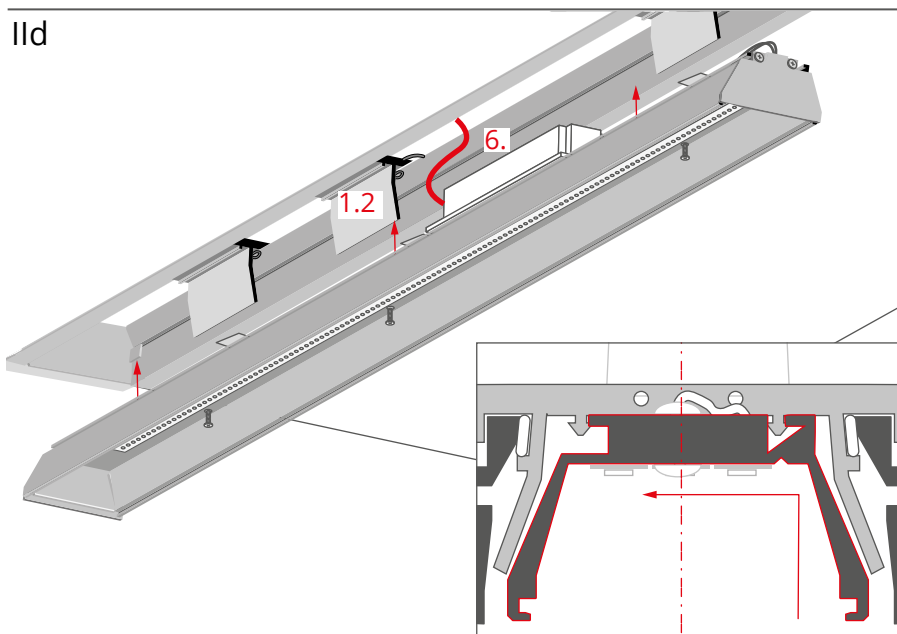

Connect the main power cables to the power supply (6).


Insert the OMODO-50 profile into the prepared mounting track.

To do so, press the profile to the wall of the RAM-KOL-50 from the side of the profiled orientation line. After that, press it to the item (1.2) and move it towards the axis of the RAM-KOL-50. This will make the hooks of the OMODO-50 profile interlock with the hooks of the items (1.2).

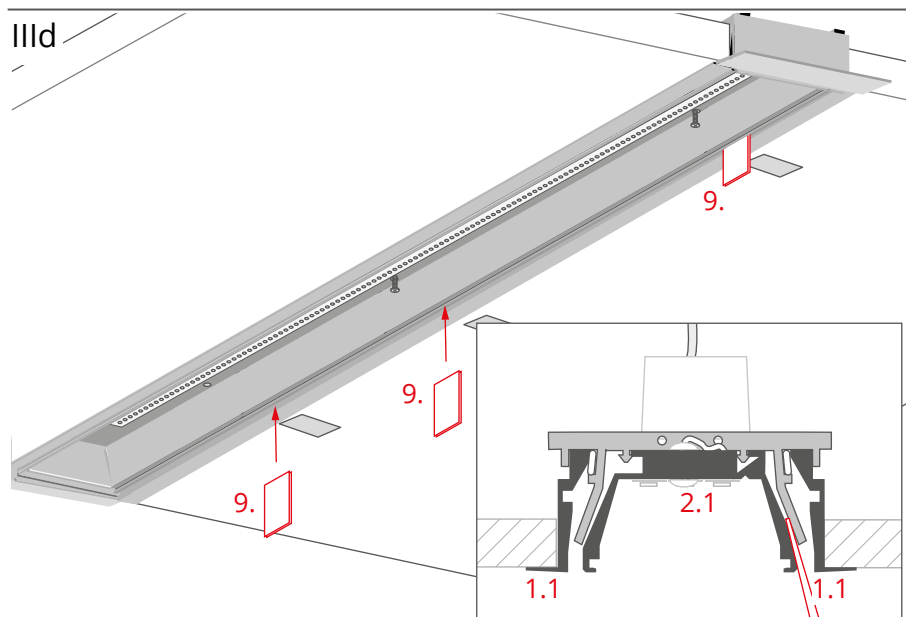


To prevent the OMODO-50 profile from falling out, insert wedges temporarily (9). They should be inserted into the marked spots in the gap between item (1.1) and item (2.1). There should be one wedge for each marked element (1.2) and they should be placed from the side of the profiled orientation line.

IVd

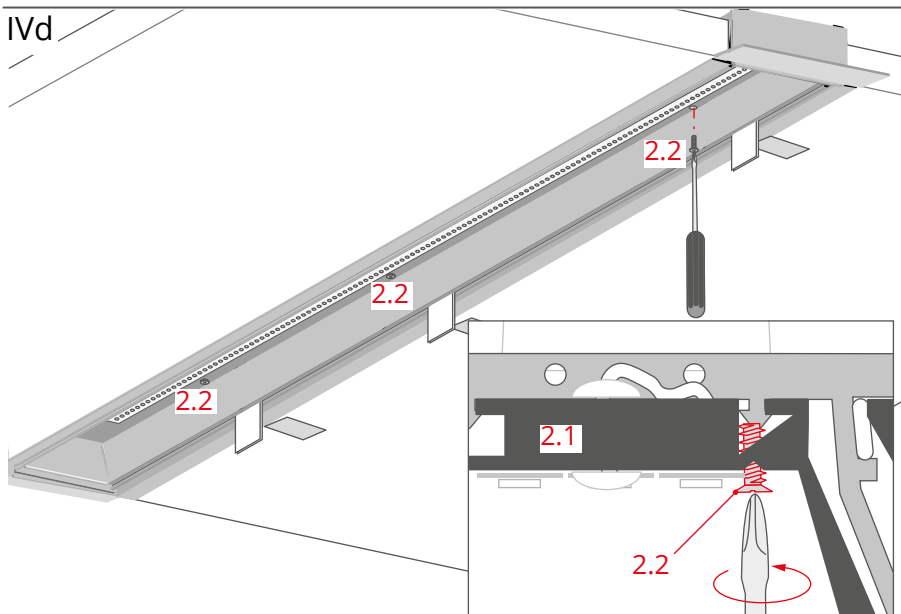

Secure the item (2.1) against slipping out by tightening the locking bolts (2.2) in the pre-drilled holes.


Vd

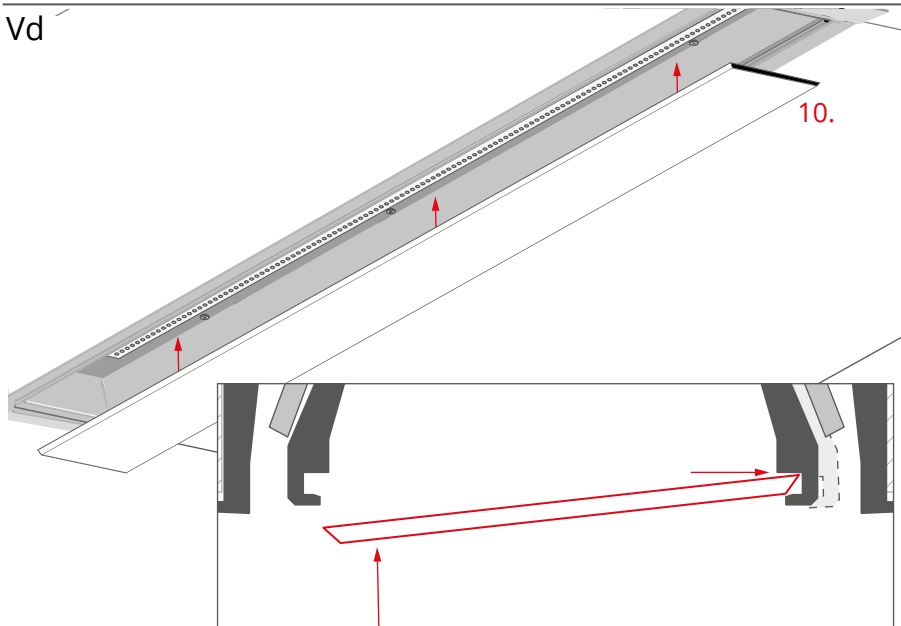

Remove wedges and markings.


Attach the cover (10) by slightly bending the edge of the profile outwards.

VId (optional)

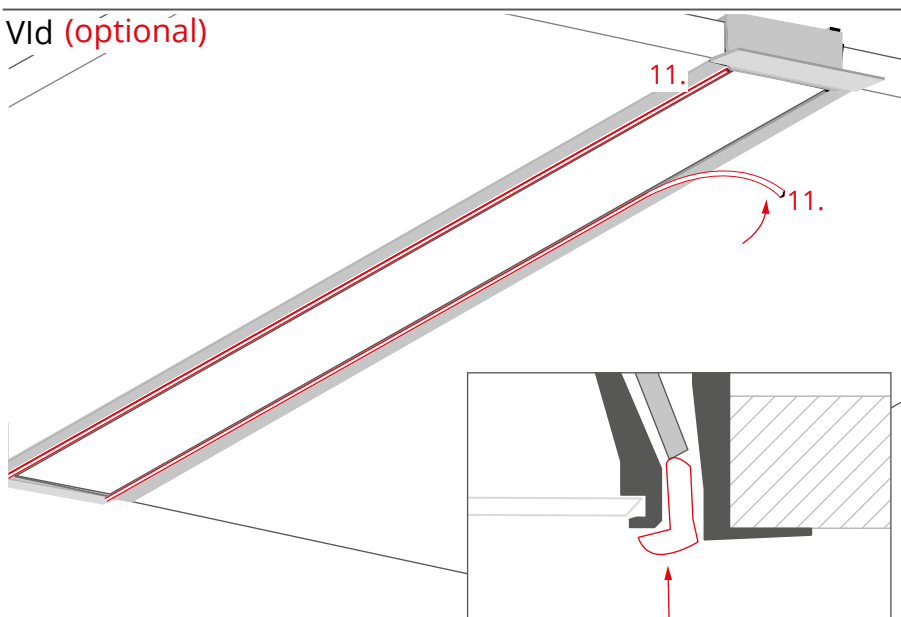

Mount the optional silicone cords (11).


SERVICE

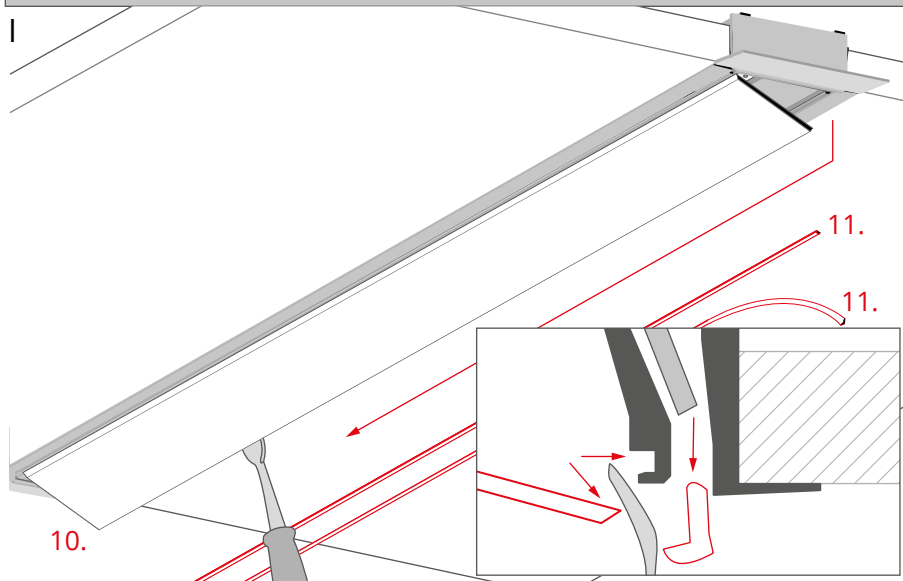


Remove the optional silicone cords (11).

Slightly bend the edge of the profile. Hook the edge of the cover (10) with a flat tool and slide the tool along the single edge of the profile so the cover will snap out.

Do not bend the cover by force!

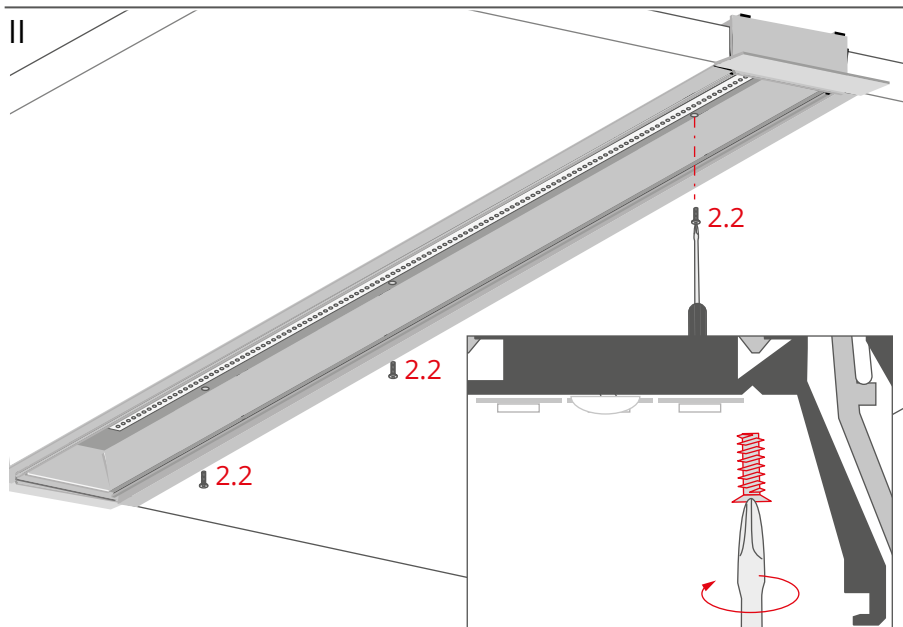

Remove the locking bolts (2.2).

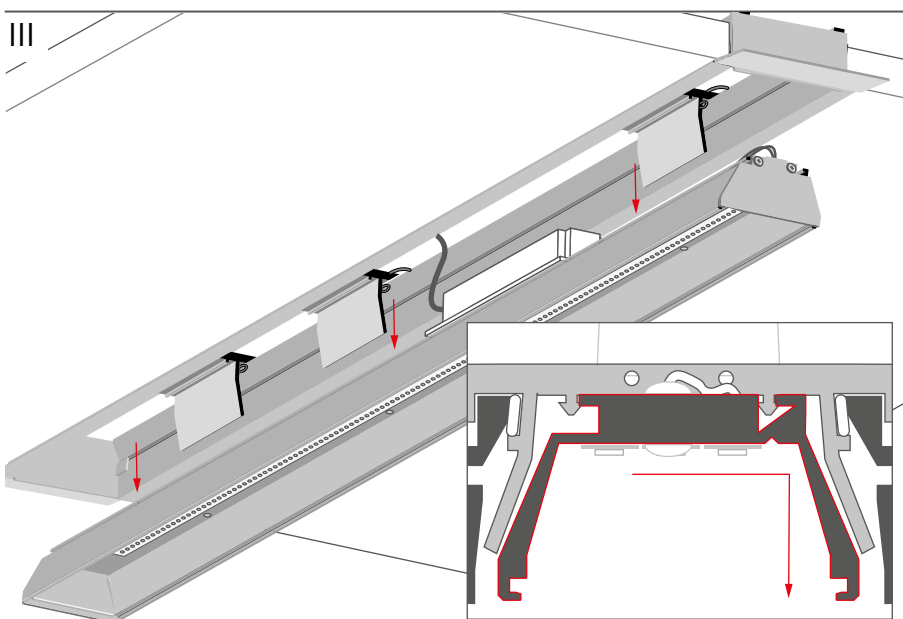

Slide the OMODO-50 profile towards the profiled orientation line and pull it down (as shown in the figure).