
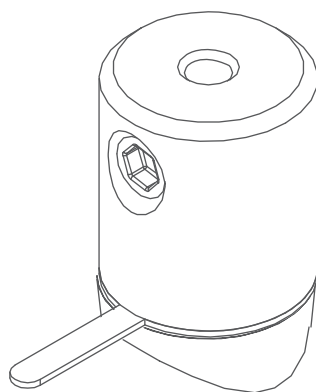
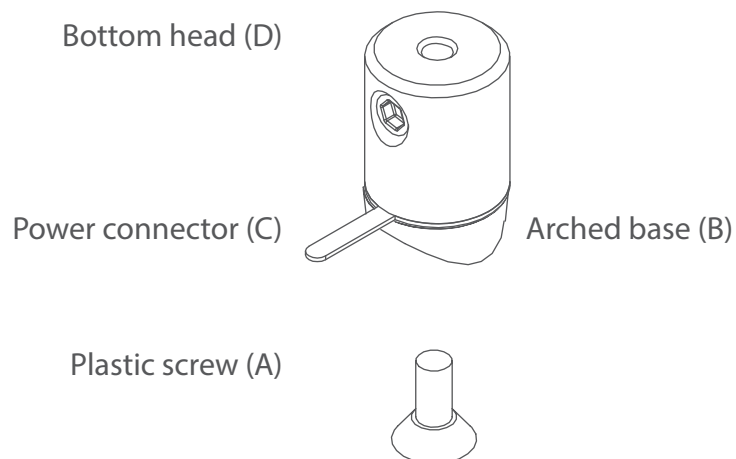


**Parts needed to mount the DP-ZZ-PDS-O fastener****Tools needed for mounting:**

- Allen wrench
- drill
- pliers
- soldering tool


NOTE! A list of products corresponding with the selected accessories is available at klusdesign.com.

- 1.** Drill a hole with a diameter of 5 mm in the selected extrusion.

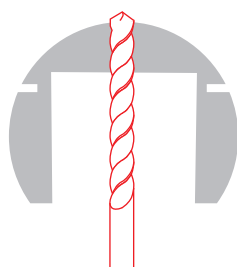


Fi 5 mm


- 2.** Bevel the hole so that the plastic screw head fits in.

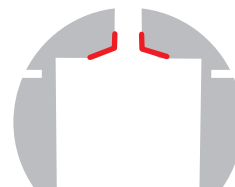


- 3.** Mount the plastic screw (A), on the top mount the assembled arched base (B), power connector (C), and head (D).

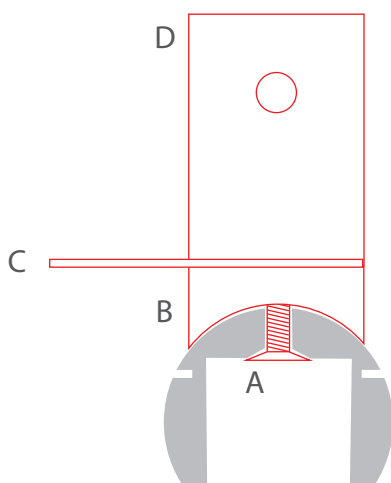

- 4.** Connect one pole of the power supply to the power connector (C).

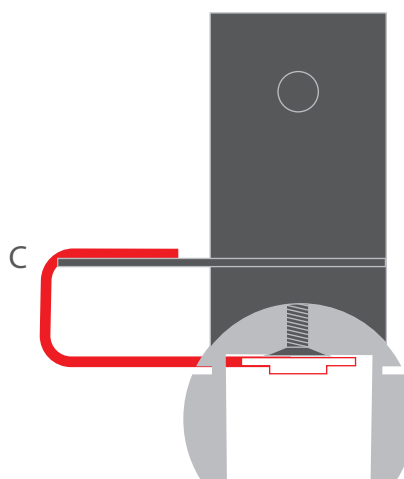

- 5.** Insert the rod into the mounting bracket of the head. Block the rod by tightening the pressure screw in the head with the Allen wrench.

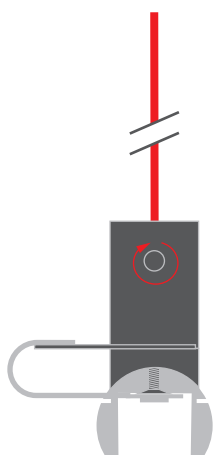

- 6.** Suspend the lighting fixture using a selected suspension and power supply system.

